2.Exploded Views and Parts List

2-1-1 Total Exploded View : HT-DM150

HT-DM150 EXPLODED VIEW (EXP)

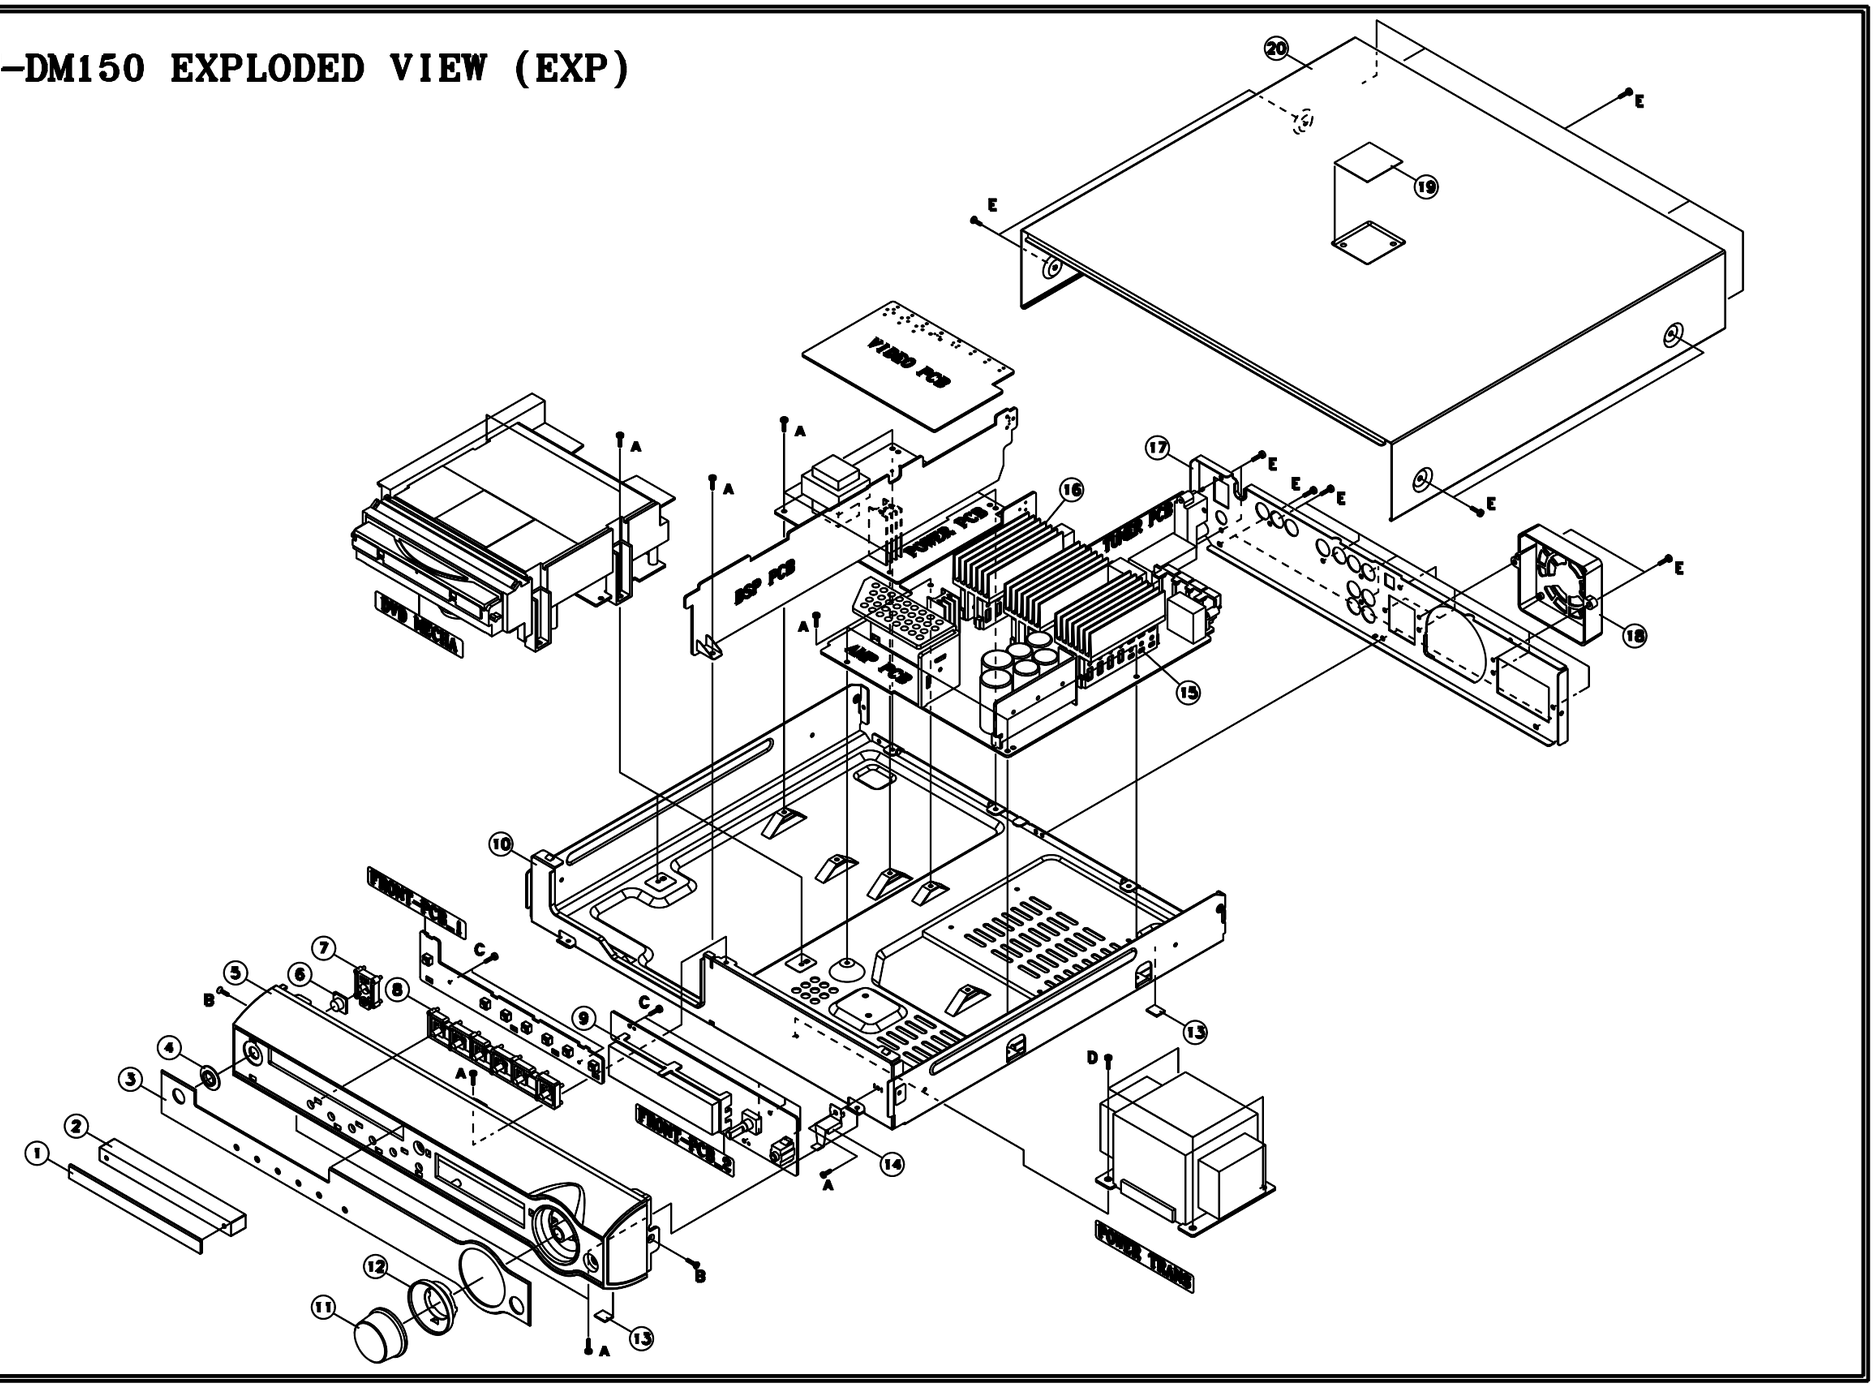

*** Parts List of Total Exploded view ; HT-DM150**

No.	Code No.	Description	Specification	Q'ty	REMARK
1	AH64-02071A	WINDOW-CD DOOR	ACRYL 1.5T	1	
2	AH64-02006B	DOOR-TRAY	ABS GRAY	1	
3	AH64-02072B	WINDOW-VFD	ACRYL 1.5T	1	
4	AH64-02008B	DECO-POWER	ABS PLATING	1	
5	AH64-02003C	CABINET-FRONT	MIPS GRAY	1	EX_BASIC, ASIA
	AH64-02003D			1	SEA
	AH64-02003E			1	EUROPE
6	AH67-00182B	LENS-POWER	PMMA MILKY	1	
7	AH64-02010A	KNOB-POWER	ABS GRAY	1	
8	AH64-02009B	KNOB-FUNCTION	ABS STAMPING	1	
9	AH61-01131A	HOLDER-VFD	ABS BLACK	1	
10	AH64-01999A	CABINET-BOTTOM	SECC 1.OT	1	
11	AH64-02011B	KNOB-VOLUME	ABS PLATING	1	
12	AH67-00183A	LENS-VOLUME	PMMA MILKY	1	
13	AH73-00005A	CUSHION-FOOT	POLON 2.0T	4	
14	AH63-00388D	SHIELD-PCB	PBS 0.3T	1	
15	AH61-00779A	HOLDER-IC	PBT BLACK	6	
16	AH62-00050A	HEAT-SINK,MAIN	AL EXTRUSION	3	
17	AH64-02002C	CABINET-REAR	SECC 0.8T	1	EX_BASIC, SEA
	AH64-02002D			1	EUROPE(Scart jack)
	AH64-02002E			1	ASIA(Dual voltage)
18	AH63-00303B	COVER-FAN	ABS GRAY	1	
19	AH64-01538B	BADGE-DVD	PE 0.3T	1	
20	AH64-02001C	CABINET-TOP	SECC 0.6T	1	
A	6002-000398	SCREW-TAP TITE	BH M3*6 YEL	16	
B	6002-000126	SCREW-TAPPING	FH M3*10 BLK	2	
C	AH60-10020D	SCREW-TAP TITE	RH M2.6*8 YEL	5	
D	AH60-00014A	SCREW-TAP TITE	TH M4*6 YEL	4	
E	AH60-00025A	SCREW-TAP TITE	BH M3*10 SILVER	24	

HT-DM550 EXPLODED VIEW (EXP)

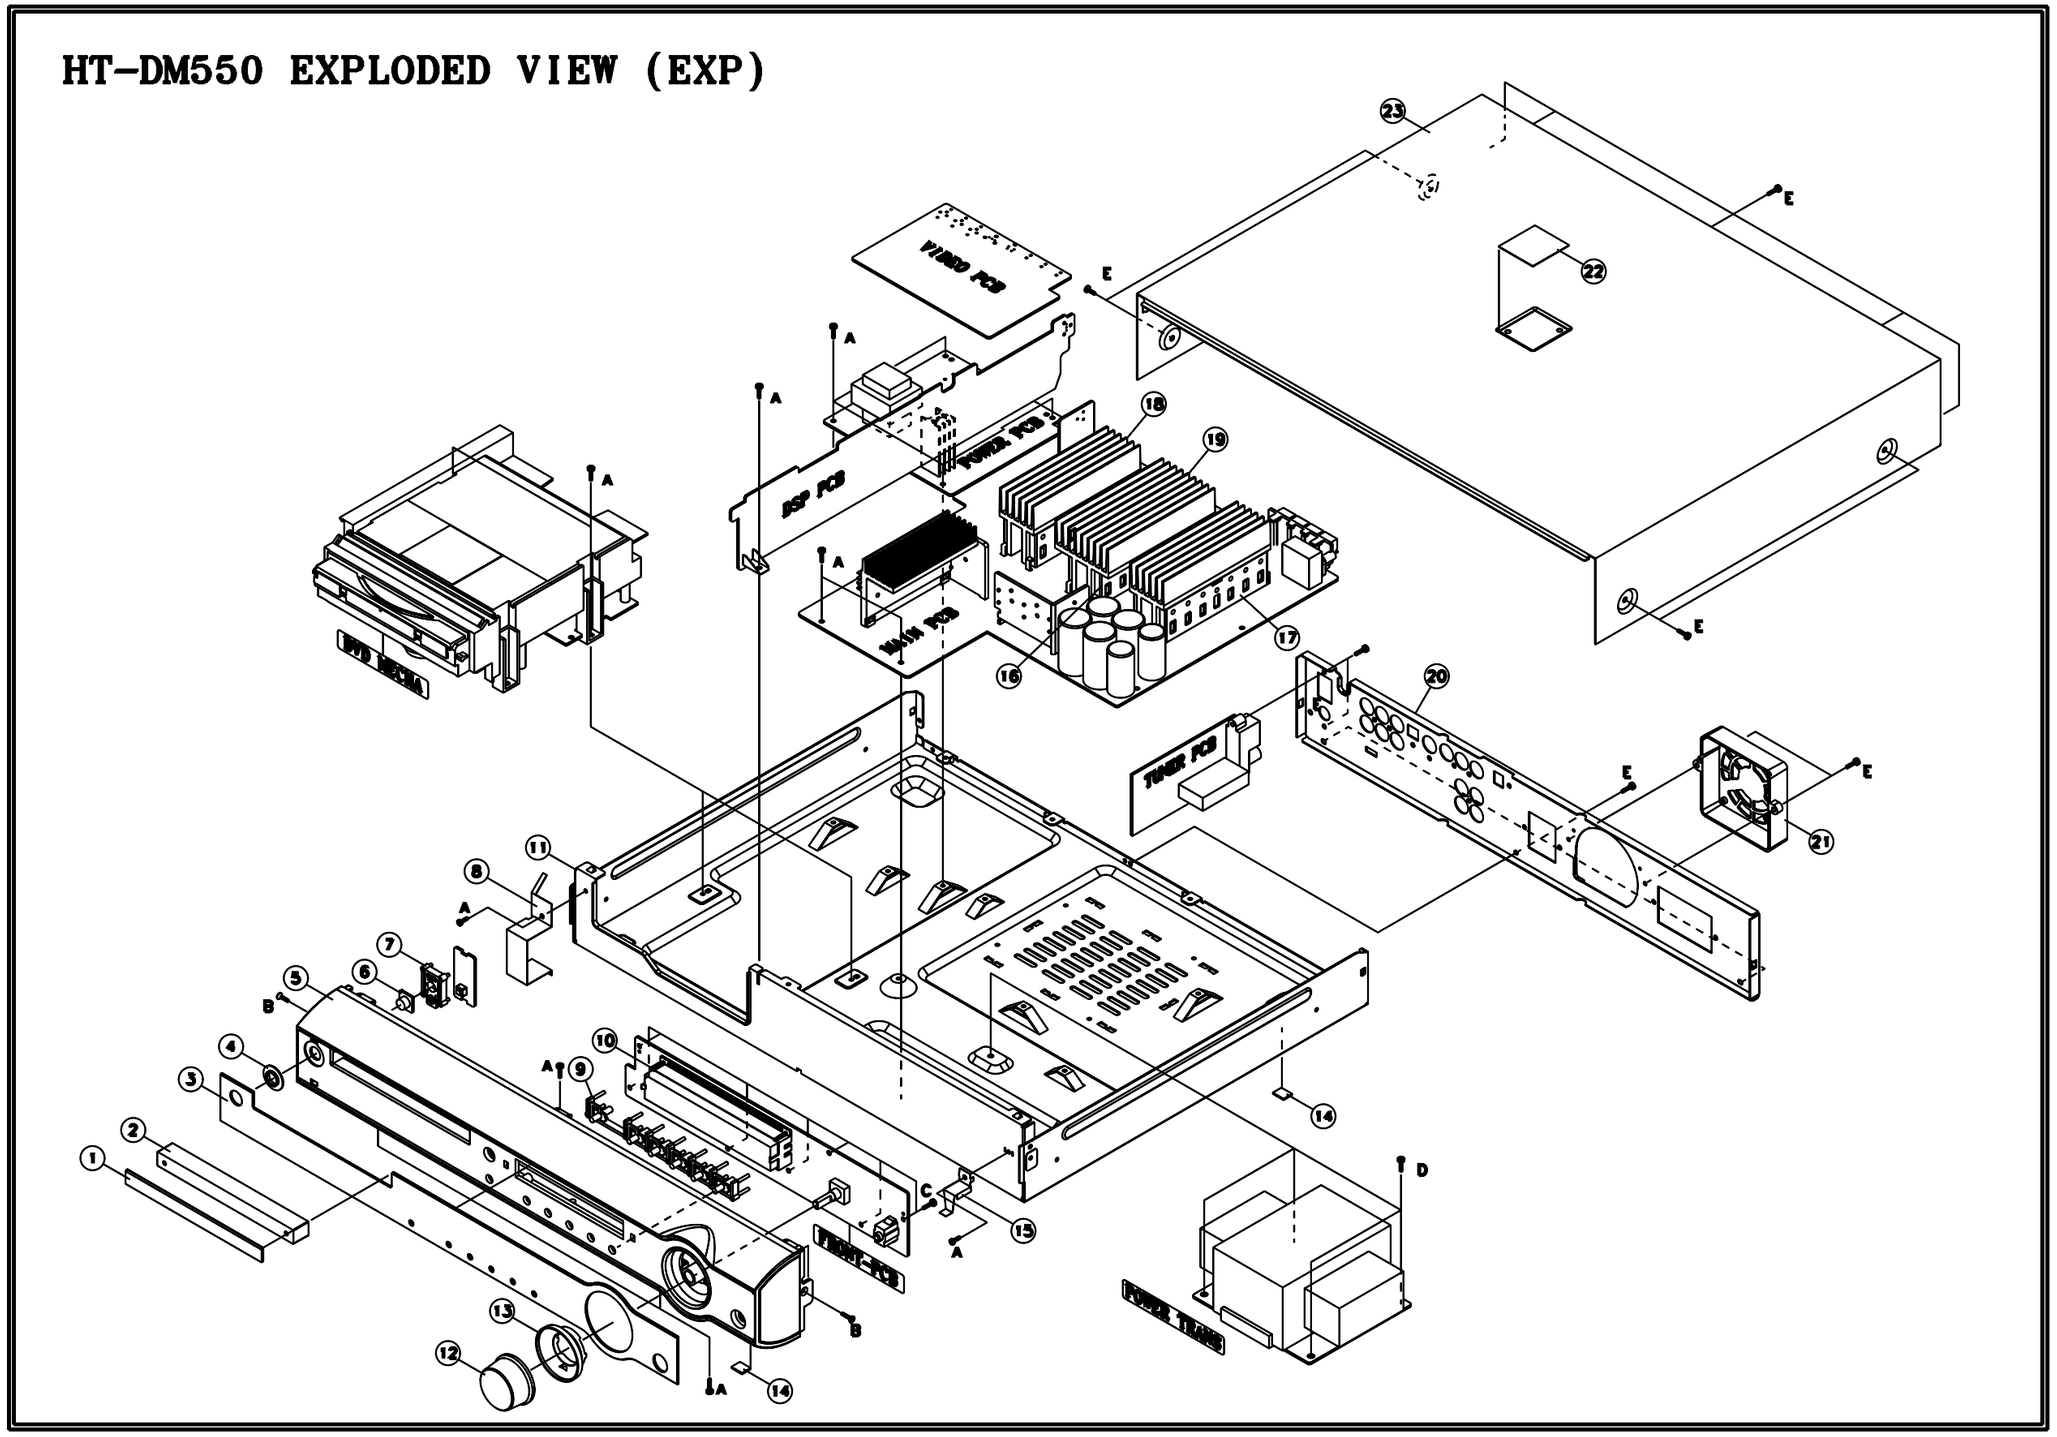

*** Parts List of Total Exploded view ; HT-DM550**

No.	Code No.	Description	Specification	Q'ty	REMARK
1	AH64-02071A	WINDOW-CD DOOR	ACRYL 1.5T	1	
2	AH64-02006B	DOOR-TRAY	ABS GRAY	1	
3	AH64-02073B	WINDOW-VFD	ACRYL 1.5T	1	
4	AH64-02008B	DECO-POWER	ABS PLATING	1	
5	AH64-02015C	CABINET-FRONT	MIPS GRAY	1	EX_BASIC, ASIA
	AH64-02015D			1	SEA
	AH64-02015E			1	EUROPE
6	AH67-00182B	LENS-POWER	PMMA MILKY	1	
7	AH64-02010A	KNOB-POWER	ABS GRAY	1	
8	AH63-00388F	SHIELD-GND	SPTE 0.3T	1	SEA (ONLY)
9	AH64-02018B	KNOB-FUNCTION	ABS STAMPING	1	
10	AH61-00853A	HOLDER-VFD	ABS BLACK	1	
11	AH64-02012A	CABINET-BOTTOM	SECC 1.OT	1	
12	AH64-02011B	KNOB-VOLUME	ABS PLATING	1	
13	AH67-00183A	LENS-VOLUME	PMMA MILKY	1	
14	AH73-00005A	CUSHION-FOOT	POLON 2.0T	4	
15	AH63-00388D	SHIELD-PCB	PBS 0.3T	1	
16	AH61-00855A	HOLDER-IC	PBT BLACK	1	
17	AH61-00933A	HOLDER-IC	PBT BLACK	5	
18	AH62-00075A	HEAT-SINK,FR	AL EXTRUSION	2	
19	AH62-00070A	HEAT-SINK,MAIN	AL EXTRUSION	1	
20	AH64-02014C	CABINET-REAR	SECC 0.8T	1	EX_BASIC, SEA
	AH64-02014D			1	EUROPE(Scart jack)
	AH64-02014E			1	ASIA(Dual voltage)
21	AH63-00303B	COVER-FAN	ABS GRAY	1	
22	AH64-01538B	BADGE-DVD	PE 0.3T	1	
23	AH64-02013C	CABINET-TOP	SECC 0.6T	1	
A	6002-000398	SCREW-TAP TITE	BH M3*6 YEL	18	
B	6002-000126	SCREW-TAPPING	FH M3*10 BLK	2	
C	6003-000276	SCREW-TAP TITE	BH M3*10 YEL	8	
D	AH60-00014A	SCREW-TAP TITE	TH M4*6 YEL	4	
E	AH60-00025A	SCREW-TAP TITE	BH M3*10 SILVER	26	

2-2 MECHA Exploded View and Parts list

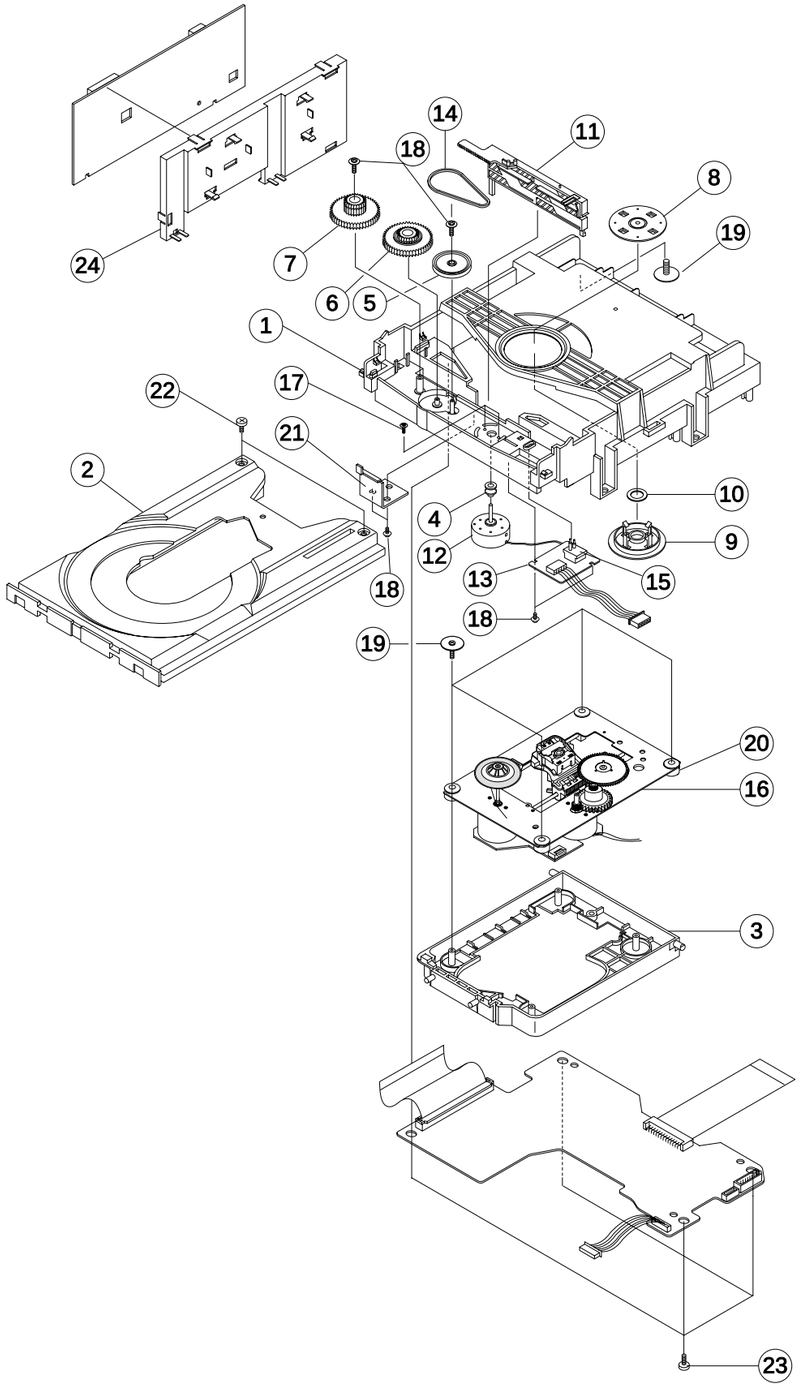

No.	Code No.	Description ;	Specification	Q'TY
	AH97-00822A	**DVD MECHA**	**CMS-D100**	
1	AH61-00746A	BASE-MAIN	ABS BLK	1
2	AH63-00294A	TRAY-DISC	ABS D/GRAY	1
3	AH66-00159A	LEVER-LIFT	ABS BLK	1
4	AH66-00160A	PULLEY-MOTOR	POM WHT	1
5	AH66-00161A	GEAR-PULLEY	TPE WHT	1
6	AH66-00162A	GEAR-MIDDLE	TPE WHT	1
7	AH66-00163A	GEAR-TRAY	POM WHT	1
8	AH66-00164A	CLAMPER-UPPER	POM WHT	1
9	AH66-00165A	CLAMPER-LOWER	POM WHT	1
10	AH61-00747A	BRACKET-CHUCK	SECC t1.0	1
11	AH66-00166A	SLIDE-CAM	POM WHT	1
12	AH31-00030A	MOTOR-DC	RF-300CA-11440	1
13	AH41-00352A	PCB-SWITCH	26.5*21.6	1
14	AH66-00167A	BELT-PULLEY	CR 1.5	1
15	3409-001119	SWITCH-DETECTOR	JDS2200	1
16	AH59-00130A	DVD DECK	CMS-S21MG6	1
17	6001-001257	SCREW-MACHINE	1.7*3(W4.5)	2
18	AJ60-10001A	SCREW-TAP	2*5(W7)	6
19	6003-001210	SCREW-TAP	2.6*6(W12)	5
20	AH73-00025B	RUBBER-CD	BUTYL 15	4
21	AH61-00958A	BRACKET-GUIDE	SECC 1.0t	1
22	6003-000283	SCREW-TAP	3*8	2
23	6003-000276	SCREW-TAP	3*10	4
24	AH61-00828A	HOLDER-PCB	ABS BLK	1

**** Caution:** Actually, the whole MECHA do not include DECK ASSY. DECK ASSY should be requested separately at service repair.*

(* NOTE : Service of **HT-DM150J Speaker System** must be performed by JBL Service Center.)

2-3-1 HT-DM150

* CAUSION : It is used the bonding, connect NET FRAME(or FRONT PANEL ASS'Y) to CABINET ASS'Y.
So when the disassembly, take extreme care not to demage the SPEAKER.

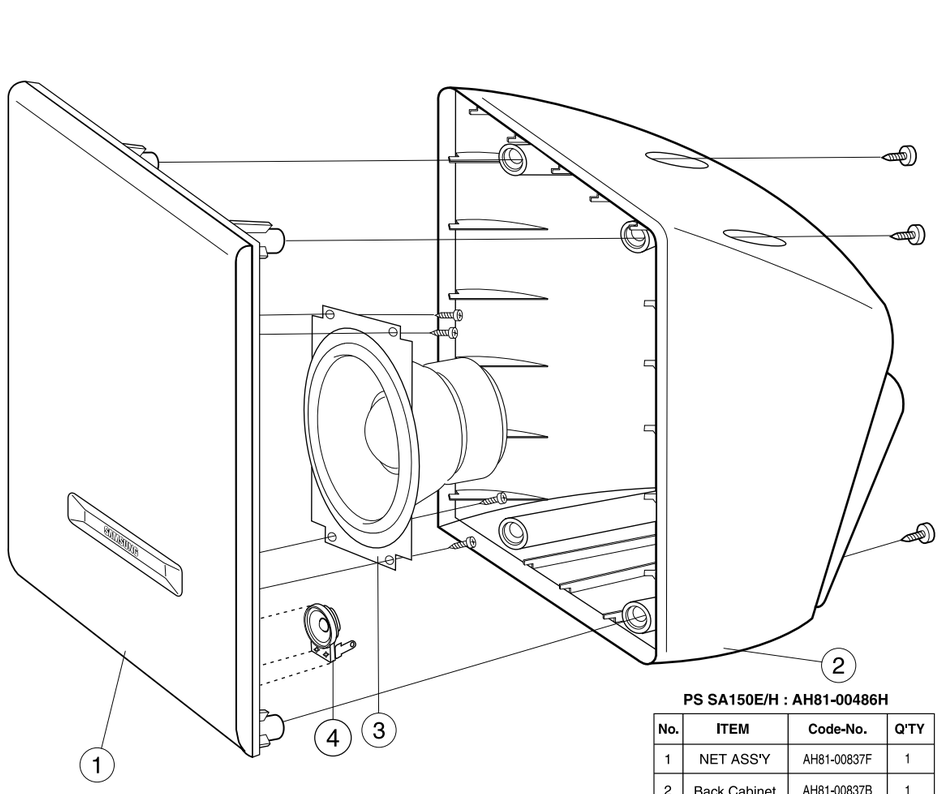

PS SA150E/H : AH81-00486H

No.	ITEM	Code-No.	Q'TY
1	NET ASS'Y	AH81-00837F	1
2	Back Cabinet	AH81-00837B	1
3	Unit 3"	AH81-00481F	1
4	Unit 11mm	AH81-00837L	1

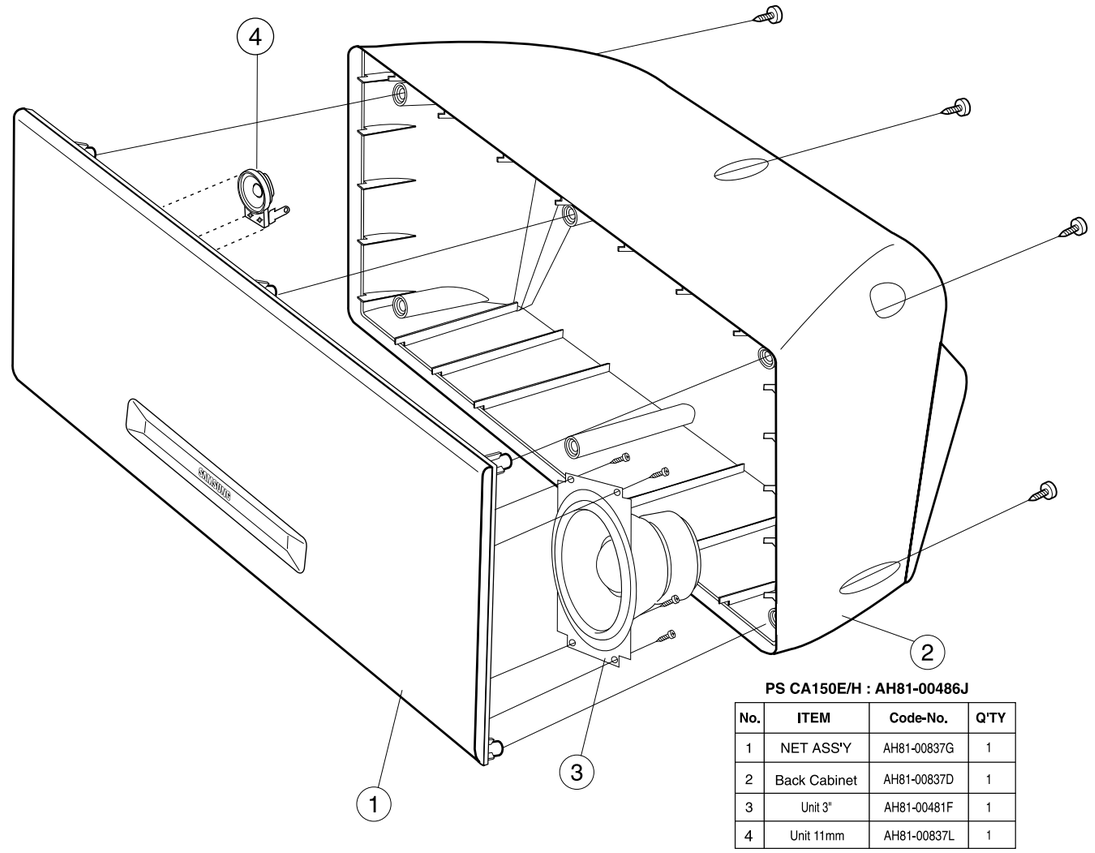

PS CA150E/H : AH81-00486J

No.	ITEM	Code-No.	Q'TY
1	NET ASS'Y	AH81-00837G	1
2	Back Cabinet	AH81-00837D	1
3	Unit 3"	AH81-00481F	1
4	Unit 11mm	AH81-00837L	1

* CAUSION : It is used the bonding, connect NET FRAME(or FRONT PANEL ASS'Y) to CABINET ASS'Y.
So when the disassembly, take extreme care not to demage the SPEAKER.

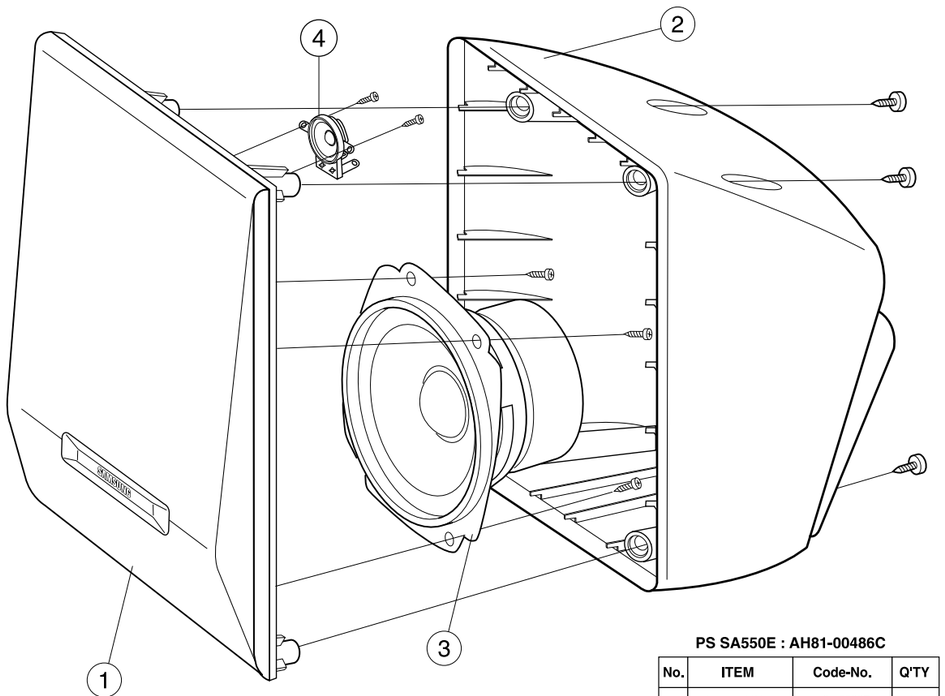

PS SA550E : AH81-00486C

No.	ITEM	Code-No.	Q'TY
1	NET ASS'Y	AH81-00837A	1
2	Back Cabinet	AH81-00837B	1
3	Unit 4"	AH81-00484F	1
4	Unit 0.5"	AH81-00837J	1

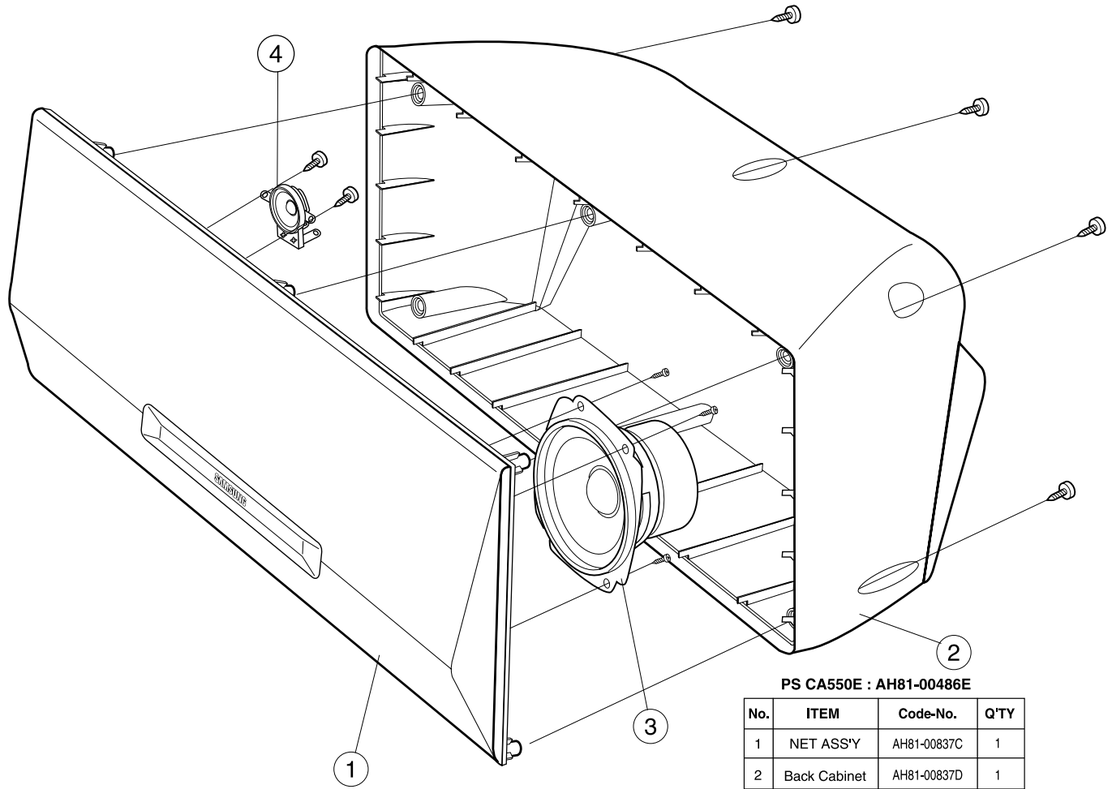

PS CA550E : AH81-00486E

No.	ITEM	Code-No.	Q'TY
1	NET ASS'Y	AH81-00837C	1
2	Back Cabinet	AH81-00837D	1
3	Unit 4"	AH81-00484F	1
4	Unit 0.5"	AH81-00837J	1

2-3-3 SUBWOOFER ; HT-DM150/ 550

* CAUSION : It is used the bonding, connect NET FRAME(or FRONT PANEL ASS'Y) to CABINET ASS'Y.
So when the disassembly, take extreme care not to demage the SPEAKER.

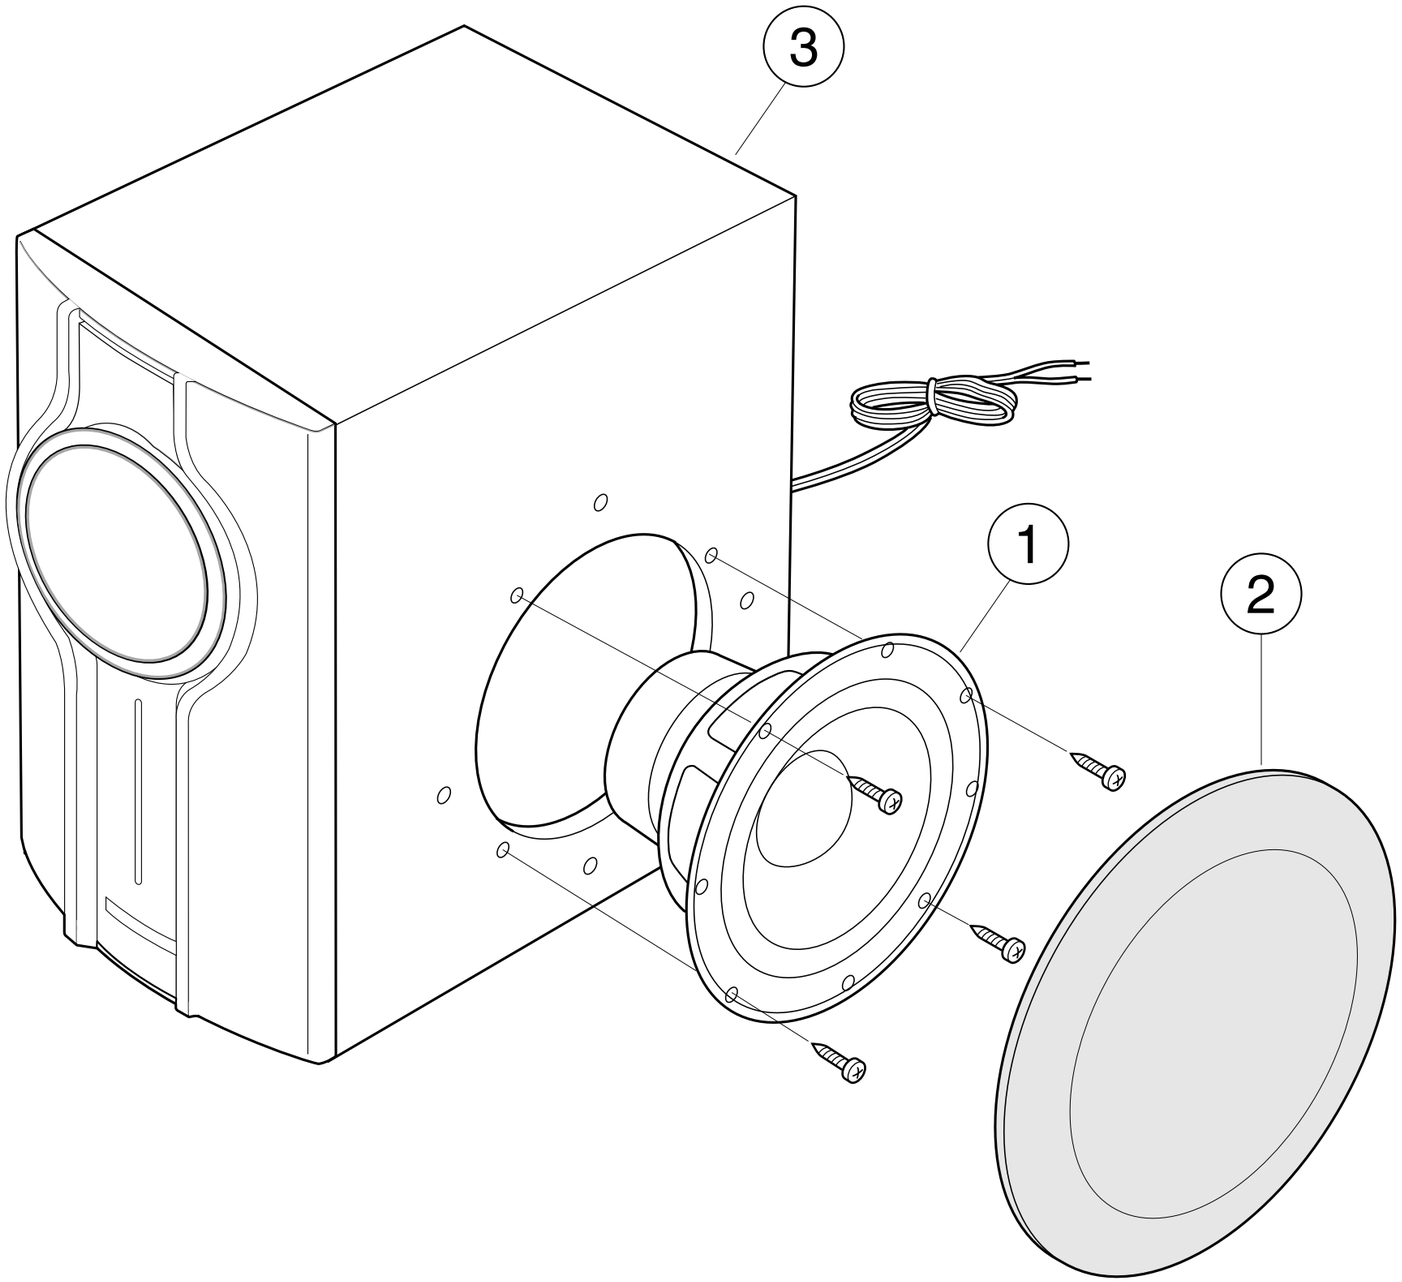

PS WA150E : AH81-00486K
PS WA550E : AH81-00486G

No.	Description	Specification	Code No.	Q'TY
1	UNIT WOOFER	F80C-D0803-4	AH81-00830D	1
2	NET ASS'Y	NET+JERSEY	AH81-00830B	1
3	CABINET ASS'Y	Panel+Cabinet	AH81-00830C	1
	HT-DM150			
	CABINET ASS'Y	Panel+Cabinet	AH81-00830G	1
	HT-DM550			